

SIERRA WIRELESS: MG90

QUICK-START GUIDE

FEBRUARY 2018







CONTACT

Address

KELTEK Incorporated 205 North High Street Baxter, Iowa 50028 United States Phone & Fax

Free Toll: +18558550328 Phone: +16412272222

Fax: + 1 641 227 2323

Online

Email 1: sales@keltekinc.com
Email 2: service@keltekinc.com

Website: www.keltekinc.com


SIERRA MG90 QUICK-START GUIDE

GENERAL TROUBLESHOOTING:

01 //

HOW TO INSERT A SIM CARD

- 1. Use a #1 Phillips screwdriver to remove the SIM card cover.
- 2. Slide the SIM card in brass side up until it clicks into place.
- 3. If you are only using a single cellular plan, the SIM will go into slot ${\sf A1}$
- 4. If you are using dual cellular plans, the SIMs will go into slot A1 and B1
- 5. Once installed, you may re-attach the cover.

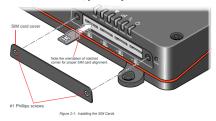

02 //

LED BEHAVIOR

- 1. Use a #1 Phillips screwdriver to remove the SIM card cover.
- 2. Slide the SIM card in brass side up until it clicks into place.
- 3. If you are only using a single cellular plan, the SIM will go into slot A1
- 4. If you are using dual cellular plans, the SIMs will go into slot A1 and B1 $\,$
- $5. \, {\rm Once} \, in stalled, you \, {\rm may} \, re{\rm -attach} \, the \, {\rm cover}.$

LED	Color/Pattern	Description	
GNSS	Solid Green	Satellite fix available	
	Flashing Amber	No satellite fix available	
	Off		
Wi-Fi	Solid Green	Wi-Fi enabled (any mode), and not connected to an access point	
	Flashing Green	Transmitting/receiving over Wi-Fi while not connected to an access point	
	Solid Amber	Wi-Fi connected to an access point (i.e. Network state is "Network Ready - Wi-Fi"	
	Flashing Amber	Transmitting/receiving over Wi-Fi while connected to an access point	
	Off	Wi-Fi is off	
Network	Flashing Amber	Connecting to a network	
	Flashing Green	Connected to WAN (over cellular, Wi-Fi, or Ethernet)	
	Solid Green	Connected to VPN	
	Off	No network connection	
Signal		If the active WAN link is:	
		Cellular—Signal shown is for the cellular radio for that link.	
		Other (Wi-Fi, Ethernet, etc.)—Signal shown is for the strongest cellular radio.	
	Solid Green	Good signal (485 dBm; equivalent to 4–5 bars)	
	Solid Amber	Average signal (♦ 100 dBm, <-85 dB; equivalent to 2–3 bars)	
	Red	Poor signal (■100 dBm; equivalent to 1 bar)	
Activity	Flashing Green	Transmitting/receiving over the WAN interface	
	Off	No WAN Activity	
Power	Solid Green	Power is present, normal operation	
	Flashing Green	Power is present, MG90 is booting	
	Solid Amber	Standby mode	
	Flashing Red	Slow blink (1 per second) — Temperature out of operating range (see Temperature (operational) on page 31) Fast blink (4 per second) — Voltage out of operating range	
	Off	No Power	
All LEDs	Green LED chase	Radio module update is in progress	
	Amber LED chase	Software update is in progress	
		Factory default reset is in progress	
	Solid White	When the factory reset finishes, the MG90 will power off and, if AutoPower is	
		enabled (LCI General > Startup tab), will reboot.	

03 //

POWER LIGHT IS FLASHING RED AND NOT POWERING UP

- 1. Ensure that the vehicle is running.
- 2. Check the ignition and power fuses in the yellow fuse holders.
- 3. If the MG90 still won't boot, contact Keltek for service.

 


Figure 2-15: MG90 LED Status Indicators (front panel)



KELTEK INCORPORATED

THANK YOU FOR THE BUSINESS.







CONTACT

Address

KELTEK Inc.

205 North High Street Baxter, Iowa 50028 **United States**

SERVICE

Direct Link: https://www.keltekinc.com/service/