

# SIERRA WIRELESS: MP70

# QUICK-START GUIDE

**FEBRUARY 2018** 







### **CONTACT**

Address

**KELTEK Incorporated** 205 North High Street Baxter, Iowa 50028 United States Phone & Fax

Free Toll: +18558550328 Phone: +16412272222

Fax: + 1 641 227 2323

Online

Email 1: sales@keltekinc.com
Email 2: service@keltekinc.com

Website: www.keltekinc.com


# SIERRA MP70 QUICK-START GUIDE

### **GENERAL TROUBLESHOOTING:**

01 //

# HOW TO INSERT A SIM CARD

- 1. Use a #1 Phillips screwdriver to remove the SIM card cover.
- 2. Slide the primary SIM card in brass side down until it clicks into place.
- 3. If you are using a dual cellular setup, the secondary SIM will go into the lower slot, brass side up.
- 4. Once installed, you may re-attach the cover.

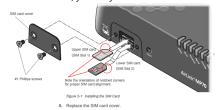

02 //

### **LED BEHAVIOR**

- 1. Use a #1 Phillips screwdriver to remove the SIM card cover.
- 2. Slide the SIM card in brass side up until it clicks into place.
- 3. If you are only using a single cellular plan, the SIM will go into slot A1
- 4. If you are using dual cellular plans, the SIMs will go into slot A1 and B1  $\,$

LED	Color/Pattern	Description		
GNSS	Solid Green	Satellite fix available		
	Flashing Amber	No satellite fix available		
	Off			
Wi-Fi	Solid Green	Wi-Fi enabled (any mode), and not connected to an access point		
	Flashing Green	Transmitting/receiving over Wi-Fi while not connected to an access point		
	Solid Amber	Wi-Fi connected to an access point (i.e. Network state is "Network Ready - Wi-Fi"		
	Flashing Amber	Transmitting/receiving over Wi-Fi while connected to an access point		
	Off	Wi-Fi is off		
Network	Flashing Amber	Connecting to a network		
	Flashing Green	Connected to WAN (over cellular, Wi-Fi, or Ethernet)		
	Solid Green	Connected to VPN		
	Off	No network connection		
Signal		If the active WAN link is:		
		Cellular—Signal shown is for the cellular radio for that link.		
		Other (Wi-Fi, Ethernet, etc.)—Signal shown is for the strongest cellular radio.		
	Solid Green	Good signal ( 485 dBm; equivalent to 4–5 bars)		
	Solid Amber	Average signal ( ≥ 100 dBm, <-85 dB; equivalent to 2–3 bars)		
	Red	Poor signal ( ■100 dBm; equivalent to 1 bar)		
Activity	Flashing Green	Transmitting/receiving over the WAN interface		
	Off	No WAN Activity		
Power	Solid Green	Power is present, normal operation		
	Flashing Green	Power is present, MG90 is booting		
	Solid Amber	Standby mode		
	Flashing Red	• Slow blink (1 per second) — Temperature out of operating range (see Temperature		
		(operational) on page 31)		
		Fast blink (4 per second)—Voltage out of operating range		
	Off	No Power		
All LEDs		Radio module update is in progress		
	Amber LED chase	Software update is in progress		
		Factory default reset is in progress		
	Solid White	When the factory reset finishes, the MG90 will power off and, if AutoPower is		
		enabled (LCI General > Startup tab), will reboot.		

### 03 //

## POWER LIGHT IS FLASHING RED AND NOT POWERING UP

- 1. Ensure that the vehicle is running.
- 2. Check the ignition and power fuses in the yellow fuse holders.
- 3. If the MP70 still won't boot, contact Keltek for service.

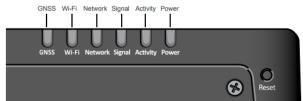


Figure 2-15: MG90 LED Status Indicators (front panel)



### **KELTEK INCORPORATED**

# **THANK YOU FOR** THE BUSINESS.







### CONTACT

**Address** 

**KELTEK Inc.** 

205 North High Street Baxter, Iowa 50028 **United States** 

#### **SERVICE**

Direct Link: https://www.keltekinc.com/service/